
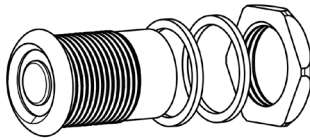


# USER MANUAL

360° SurroundVUE™ System  
with 6 Proximity Sensors

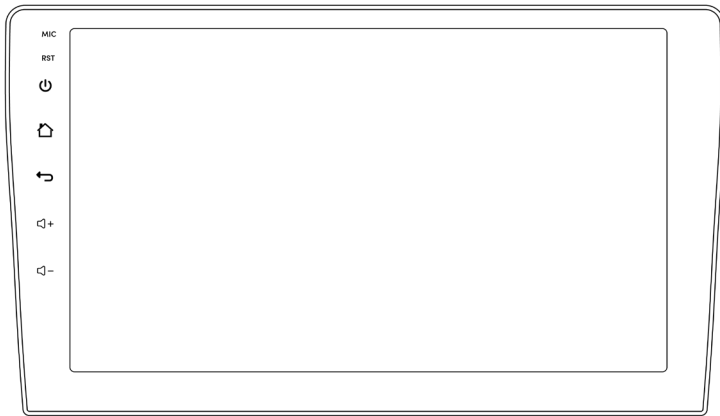

FLTW-3610


**BRAND**MOTION 

## 360 View Controls – Touch Control



- How to activate: Tap the 3D icon to enter the 3D perspective. Tap the 3D icon again to enter orbit mode
- Tap and swipe on the screen to orbit around around the vehicle.

## 360 View Controls – Dial Control

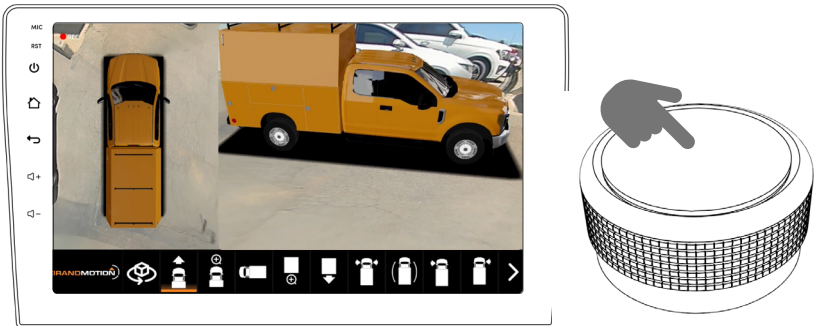

- Select "Front Bumper View" and press the center of the dial. Rotate the dial to rotate around your vehicle.
- NOTE: To quickly access 360 view when you are in a different view, press the center of the dial.

# DVR Playback & Export



## Video Playback – View a recording of your video


- Select Playback icon to view the library of recorded videos.
- Select the date of the video, then select a video for playback from the monitor.
- Date format (YYYY-MM-DD)




*\*example of DVR video*

## Video Export – Save to USB

- NOTE: To export a video from the system, insert a USB drive and select "Export". This will save a copy of the video to the connected USB drive. The video will be raw footage from all four cameras.

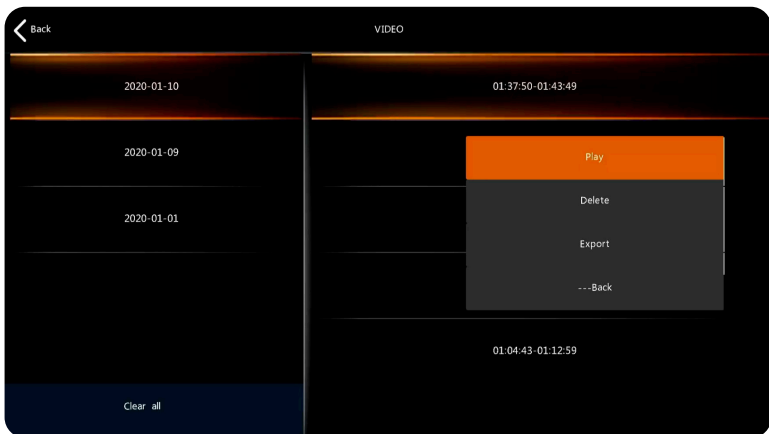


# View DVR footage on Computer

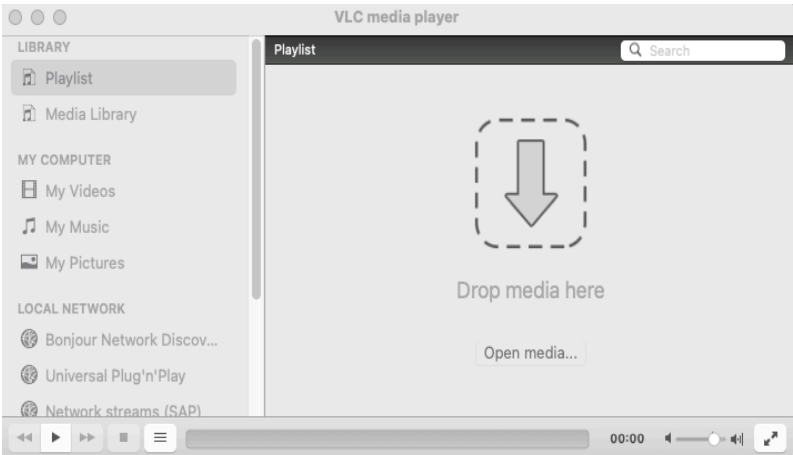

## Video Computer Playback – View your recording on a computer

- The recording file type is .asf . In order to view this file, please visit <http://www.videolan.org> and download the program called VLC Media Player.
- Within the VLC program, the video can be exported in a variety of file formats utilizing the “Convert & Stream” function. Convert to .mp4 for the most compatibility.

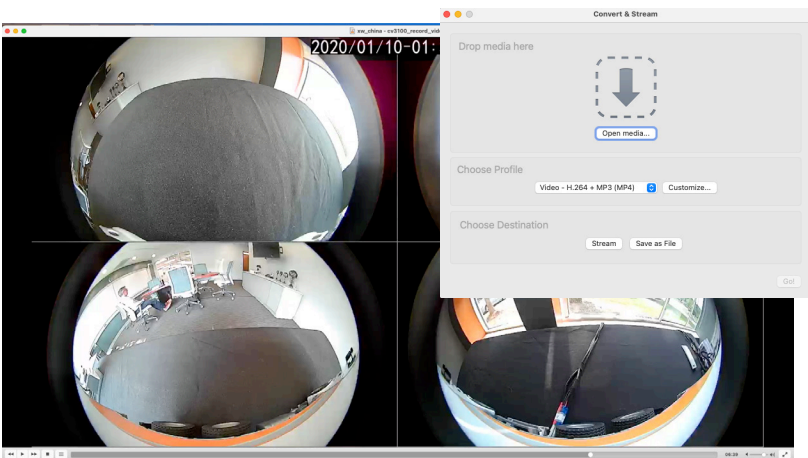

# Proximity Sensor Overlays



## Reading the Sensor Overlay - Topdown

- The bottom sensors (A-D) show on the back of the topdown vehicle, and can display on the right backup view if enabled.
- The top sensors (E and F) show on the front of the vehicle in the topdown view, and do not display in the right view.

## Proximity Sensor Overlays Cont.



### Front/Rear Adjusting - On

- See Install Instructions page 18 for more information.
- Toggle on to display backup sensor overlays on the right side backup camera
- This will also calibrate the backup camera view.



### Front/Rear Adjusting - Off

- Toggle off to remove backup sensor overlays on the right side backup camera. Overlay will still be visible in the topdown view and 3D views.
- Backup camera will give the full uncalibrated view.

## Proximity Sensor Overlays Cont.




### Proximity Sensor Overlay – 3D View

- When the backup sensors are active, the sensor distance overlays are also visible in the 3D views.

# Vehicle Triggers Views

(If connected to vehicle outputs)

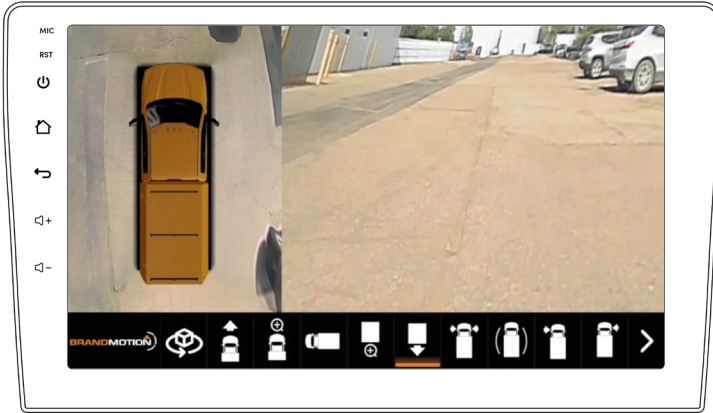

## Rear View - Backup camera view

- When vehicle is put into reverse, rear camera is triggered
- View defaults back to front camera after shifting out of reverse




## Left/Right Turn Signal - Perspective view with turn signal


- Shows corresponding side when turn signal is activated.
- View defaults back to front camera when turn signal is deactivated.



# Camera Views

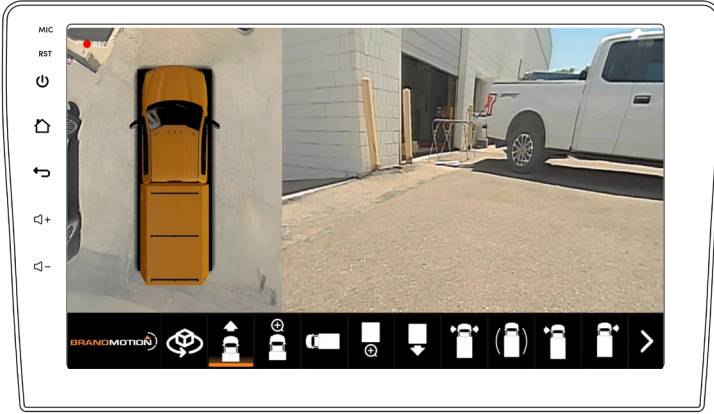


**Front View** - Standard bird's-eye 360 view with front camera view

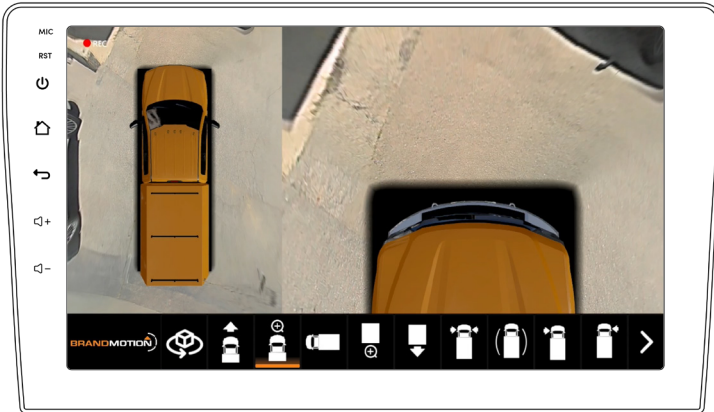

**Front Top View** - Standard bird's-eye 360 view with top-down 3D front view

# Camera Views Cont.

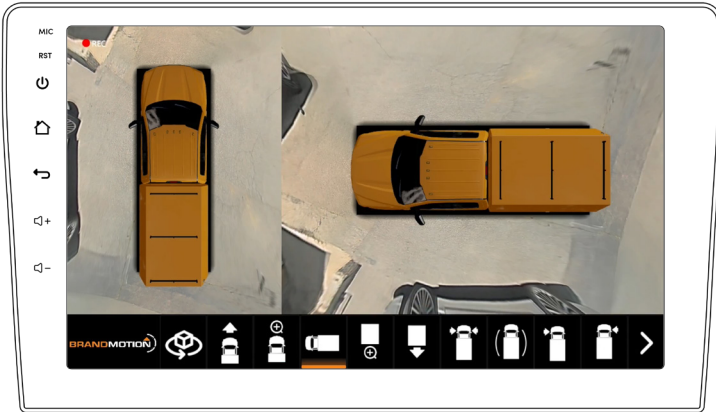


**Top View** – Standard bird’s-eye 360 view with expanded 360 top-down view




**Rear Top View** – Standard bird’s-eye 360 view with top-down 3D rear view

## Camera Views Cont.

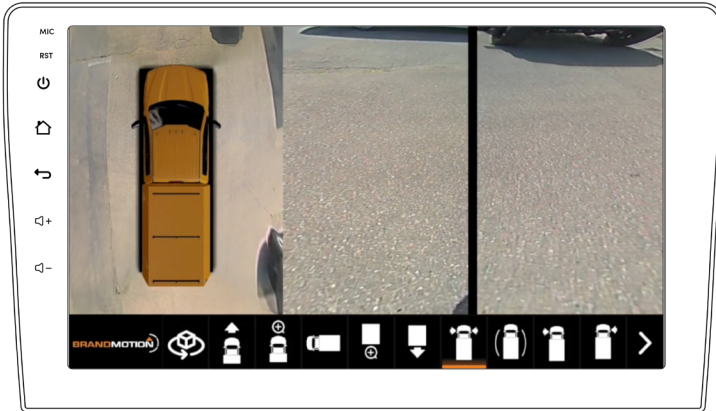

**Side Views** - Standard bird's-eye 360 view with side by side view of vehicle exterior

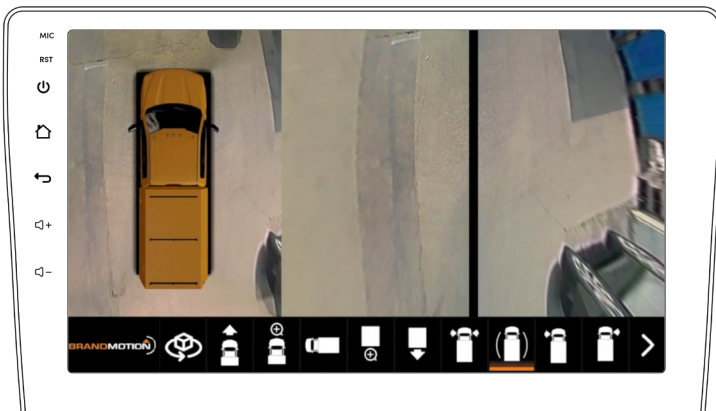

**Top Side View** - Standard bird's-eye 360 view with wide angle side view of vehicle exterior



## Frequently Asked Questions

### **Q: How do I download DVR content?**

- Insert a USB drive into the USB port on the harness. Then select the video from the DVR recording library on the system, and select "Export". For more information, please see page 3.

### **Q: Does the system record all of the time?**

- By default the system will only record when the system is on. Activate the system by turning on the vehicle ignition.
- You can enable parking monitor recording. See the installation instructions page 14 for information on enabling parking monitor mode.

### **Q: What content is recorded?**

- The DVR output is a single video that shows all four cameras in their native video perspective. Menus, unique perspectives, and sound are not recorded. For more information, please see page 3.

### **Q: What is the internal storage of the system?**

- The internal storage of the system is 16GB. This will be enough space for roughly 32 hours of video content.

Questions? Call the technical support line at  
(734) 619-1250