

blueconnect Installation Materials

Parts list:

Make sure that you have the following parts, and that the console matches the interior of your vehicle.

1. BlueConnect Console
2. Wire harness



You will need the following tools to perform your installation:


1. Phillips Screwdriver PH2
2. 7mm socket & wrench
3. 10mm socket & wrench
4. Plastic pry tool to remove A-pillar caps
5. Electrical tape

blueconnect Installation Instructions

1. Remove factory overhead console. Pull down releasing mounting clips from mount bracket.



2. Unplug dome light power connection and remove factory overhead console.

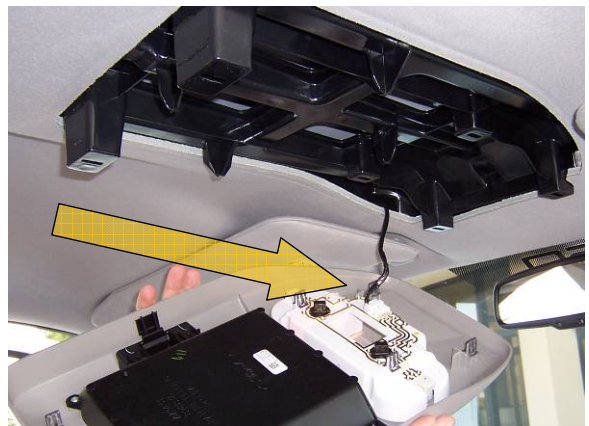

3. Remove radio dash panel and disconnect wires.



blueconnect Installation Instructions (cont.)


4. Remove radio (four hex head screws)



5. Remove the factory power harness connector from the back of the radio.



6. Remove the A-pillar trim by prying the screw covers off (use a soft plastic tool) and loosening the two hex head fasteners.

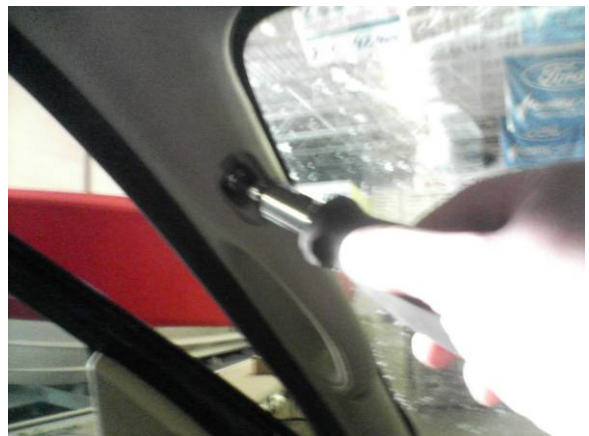

blueconnect Installation Instructions (cont.)

7. Remove the sun visor by unscrewing the three screws from the elbow bracket and one screw from the visor clip (Phillips screw driver). This allows you to fish the wires above the headliner.



8. Route the single connector end of the Brandmotion BlueConnect wire harness from the radio:

1. Along underside of dash & up through the space between the dash & the A-pillar
2. Run the wires up the A-pillar along windshield. Use electrical tape to hold the wires in place.
3. Fish the wires through headliner to the console location in the center of the overhead. Take care not to interfere with the visor or A-pillar mounting points.



blueconnect Installation Instructions (cont.)


9. Connect Brandmotion wire harness to the replacement BlueConnect overhead console and re-connect dome light power connection.



10. Install BlueConnect overhead console to mount bracket on roof.



11. Connect factory radio harness into female end of Brandmotion BlueConnect harness and connect male end of Brand Motion BlueConnect harness into radio.

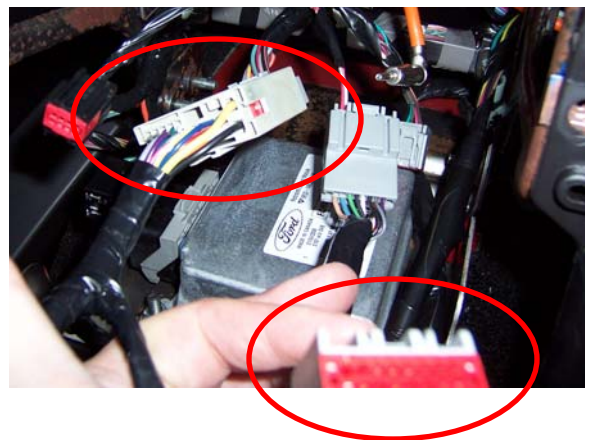

12. Test system. Reinstall radio and re-assemble vehicle. Enjoy your new seamlessly integrated phone system!

